6□□2.4G 4CH□□□□□□□ □□□□□□□ REH67395

□□□□□□□□□

□□□□□□□□□□□□□□□□□□
□□□□□□□□□□□□□□□□
□□□□□□□□□
□□□□□□□□□□
□□□□□□□□□□□ABS
□□□□□□□□□□□□□
□□□□□□□6□□□□□□□□□2.4G 4CH□□□□□□□
□□□□□□□REH67395

□□□□

□□/□□□□□□□□□□□□□□□□□□/□/□/□□□□□□□3D□□□□□□□□□□□□□□□□□□□

REH67395

SUPER MINI

Forward

Back

Side

Colors

360 - degree turn

360 - degree turn

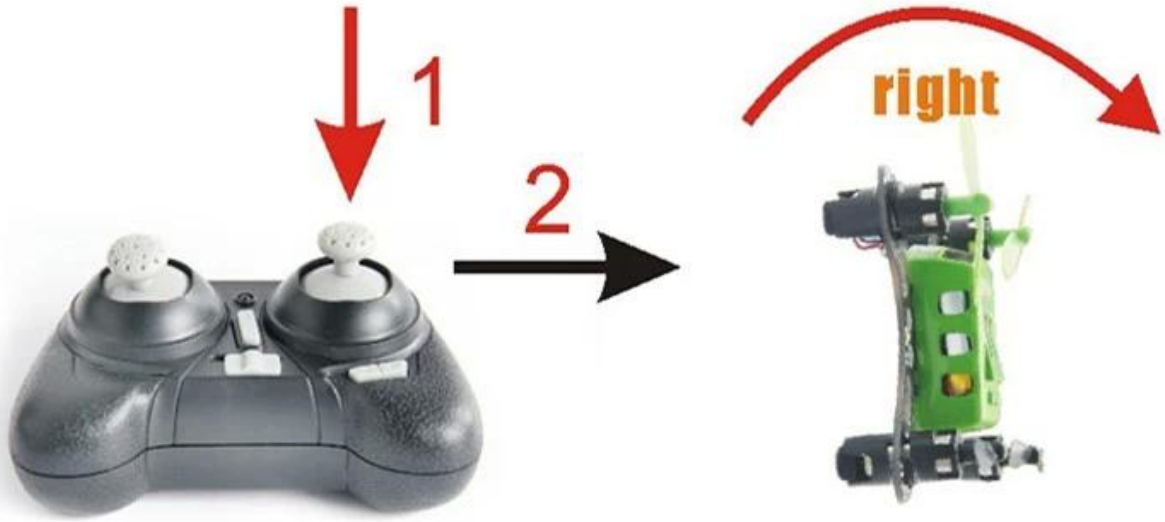

Tips for rotate and lateral movement:
If you want UFO perform right barrel roll,
keep the UFO stable in the air,
push the right stick and make stick to the right,
then it goes!

360 - degree turn

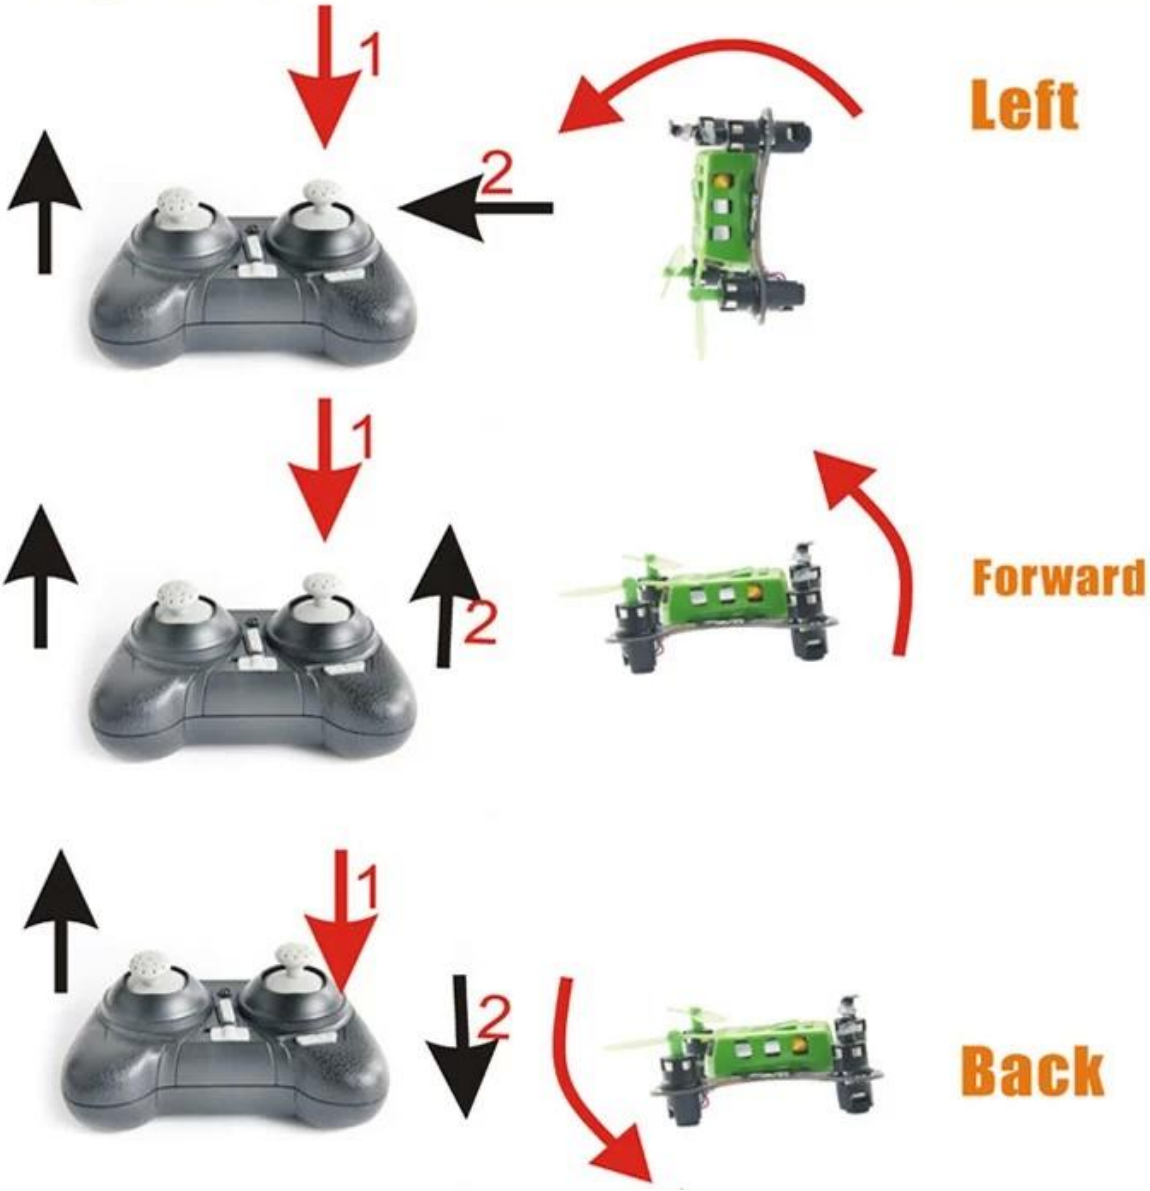

The part name

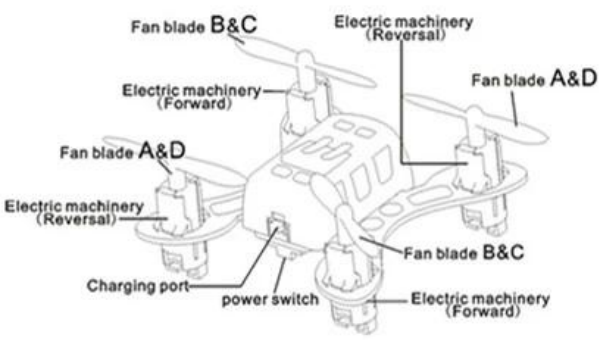

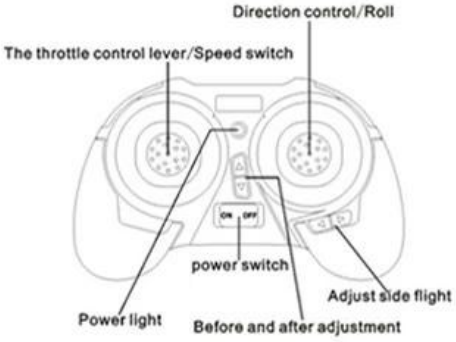

Charging guide

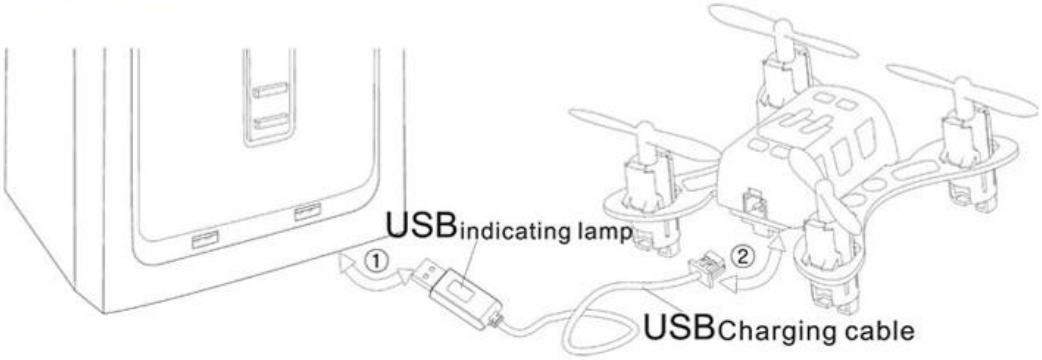

(before charging, the aircraft power switch to the "**OFF**" state)

①、The **USB** charge **USB** interface connection line insertion has opened the computer, the **USB** indicator is lit state.

②、Then **USB** charging cable to the other end is inserted into the body at the charging socket, **USB** indicator light is extinguished state.

③、Charging for about **35** minutes, the **USB** indicator lights up, show that the charging is completed, please disconnect all connections and placed in a safe place.

Remote battery installation:

As shown in figure, remove the remote controller battery cover, in accordance with the battery box of the polarity of the battery The correct installation **2 "AAA"** batteries , and then loaded on the battery cover, tighten the screws.

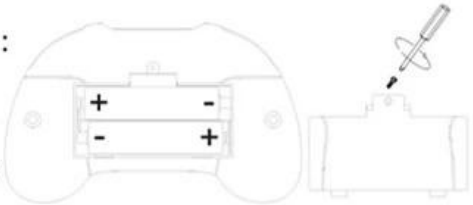

Aircraft parts diagram

001
Casing

002
USBCharging cable

003
Electric machinery
(Forward)
(The red and blue lines)

004
Electric machinery
(Reversal)
(Black and white line)

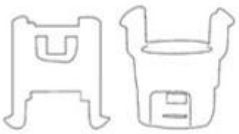

005
The motor seat

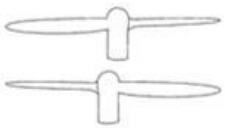

006
Wind leaf



007
Rechargeable lithium battery

008
2.4G receiver board

□□□□□□□□□□□
1 X □□□□□□□□
1× □□□□□□
2 X AB□□□□□
1 X □□
1 X USB□□□□
1 X screwer

□□□□□□□□□□□□□□□□□□□□□□□□□□□□□